Roller Shade Tension Adjustment

The method depends on the headrail style. Find yours below.


HEADRAIL	ADJUSTER	MORE TENSION	LESS TENSION
Curved	Hex insert on the side	**Turn clockwise**	**Turn counterclockwise**
Square	Dial inside the headrail	**Turn toward (+)**	**Turn toward (–)**

A Curved headrail

Hex insert on the side of the headrail

1. Find the **hex insert** on the side of the headrail (Image 1). Insert an **Allen key** into the hex insert.
2. Turn **clockwise** to increase tension. Turn **counterclockwise** to lessen it.

IMAGE 1

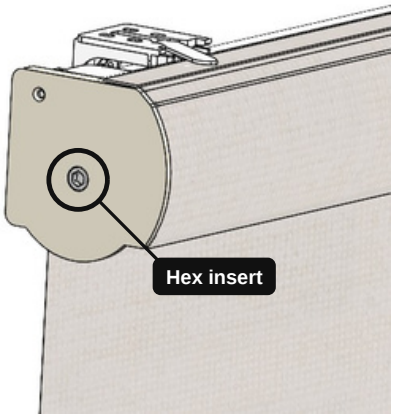


The hex insert on the side of the curved headrail.

B Square headrail


1. Find the **dial inside the headrail** (Image 2).
2. Check the **(+)** and **(–)** markings on the dial (Image 3).
3. Turn toward **(+)** to increase tension. Turn toward **(–)** to decrease it.

IMAGE 2

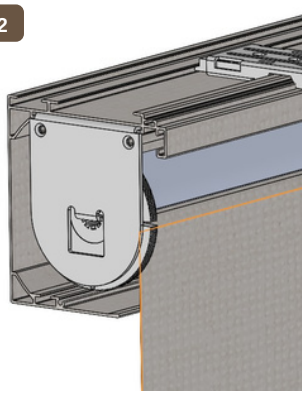

Square headrail, where the dial sits inside.

IMAGE 3

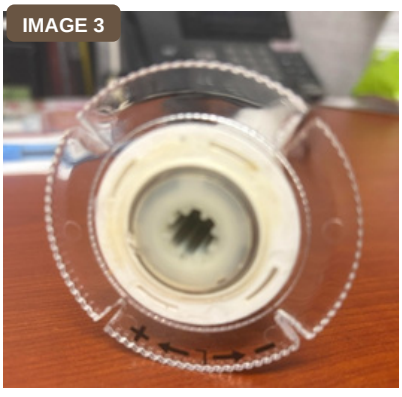

The dial, with its (+) and (–) markings.

ACCESS NOTE

The dial is hard to reach while the blind is hanging. You may have to **remove the endcap** to get to it.